

Lenovo A516 Quick Start Guide v1.0



For Android 4.2 Software. Read this guide carefully before using your phone.

Technical specifications

Model	and	system

Model: Lenovo A516

System: Android 4.2

[®]Size and weight

Height: 133 mm Width: 66.7 mm Depth: 9.9 mm Weight: 146 g



CPU and capacity

CPU: MT6572 Dual Core 1.3 GHz Capacity: 4 GB



Camera

Type: CMOS Pixels: 5.0 MP (back) + 0.3 MP (front)

Power and battery

Battery: 2000 mAh (Built-in rechargeable lithium-ion battery)



Display

Size: 4.5 inches (diagonal) Resolution: 854 x 480

Screen: Multi-touch display LCD type: IPS

Wireless communication

Bluetooth 4.0

WI AN

WCDMA, GSM




① Based on actual measurements.

First glance




Preparing your phone

You need to insert the SIM card provided by your carrier to use cellular services. Install your phone as shown.

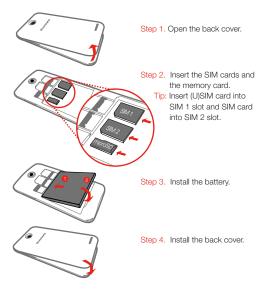

DO NOT insert or remove the SIM cards while your phone is turned on. Doing so can permanently damage your SIM card or your phone. Charge the battery as shown.

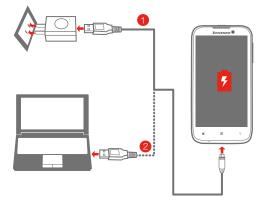

Method 1. Connect your phone to a power outlet using the included cable and USB power adapter.

Method 2. Charge the battery using a computer.

Low battery







For more information about battery safety, see the Important Product Information Guide

Learn more

For more information about Lenovo Mobile Phone functions, Regulatory Notices and other useful manuals, go to http://support.lenovo.com/.

Legal notices

Lerovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both. Other company, product, or service names may be trademarks

or service marks of others.

First Edition (September 2013) © Copyright Lenovo 2013. LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

Reduce | Reuse | Recycle





5SC9A463RJ Printed in China