

Lenovo A526 Quick Start Guide v1.0



Read this guide carefully before using your phone.

Technical specifications

Model and system Model: Lenovo A526

System: Android 4.2.2

[©]Size and weight

Height: 132 mm Width: 67.6 mm Depth: 11.1 mm Weight: 145 g



CPU

CPU: MT6582M Quad Core 1.3GHz

Ē	Cam
	_

era

Type: CMOS Pixels: 5.0 MP (back) + 0.3 MP (front)

Power and battery

Battery: 2000 mAh

Display

Size: 4.5" FWVGA Resolution: 854 × 480 Screen: 1 point touch LCD type: TN

Wireless communication

[©]Bluetooth 4.0 WI AN WCDMA, GSM, EDGE



Based on actual measurements.


2 Launch with Android 4.2 which only supports BT 4.0 PXP profile.

First glance



Preparing your phone

You need to insert the SIM card provided by your carrier to use cellular services. Install your phone as shown.

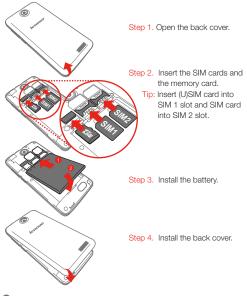

DO NOT insert or remove the SIM cards while your phone is turned on. Doing so can permanently damage your SIM card or your phone.

Charging the battery

Charge the battery as shown. lenovo Ξ 88

Method 1. Connect your phone to a power outlet using the included cable and USB power adapter. Method 2. Charge the battery using a computer.

Low battery







For more information about battery safety, see the Important Product Information Guide

Learn more

For more information about Lenovo Mobile Phone functions, Regulatory Notices and other useful manuals, go to http://support.lenovo.com/.

Legal notices

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both. Other company, product, or service names may be trademarks or service marks of others.

First Edition (January 2014) © Copyright Lenovo 2014.

Reduce | Reuse | Recycle





8306LV8001W Printed in China