lenovo.

Lenovo A680 Quick Start Guide v1.0

Technical specifications



Model and system Model: Lenovo A680

System: Android 4.2



Size and weight

Height: 145 mm Width: 73.5 mm Depth: 10.8 mm Weight: 165 g



CPU and capacity

CPU: MT6582M Quad-core 1.3 GHz

Capacity: 4 GB



Camera

Type: CMOS Pixels: 5.0 MP (back) + 0.3 MP (front)



Power and battery

Battery: 2000 mAh



Display

Size: 5.0 FWVGA Screen: 1 point display Resolution: 854 × 480 LCD type: TN



Wireless communication

©Bluetooth 3.0 WI AN WCDMA, GSM, EDGE



Based on actual measurements. 2 You must be within about 10 m (30 ft) of a Bluetooth device for it to be connected to your phone.


First glance



- Front camera
- 4 Micro USB
- Speaker
- 2 Volume key 3 Earphone jack
- 8 Back camera
- 5 Receiver 6 On/Off button


Preparing your phone

You need to insert the SIM card provided by your carrier to use cellular services. Install your phone as shown.

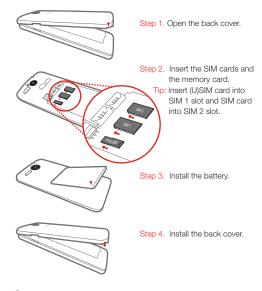

DO NOT insert or remove the SIM cards while your phone is turned on. Doing so can permanently damage your SIM card or your phone.

Charging the battery

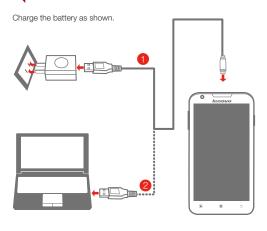

Method 1. Connect your phone to a power outlet using the included cable and USB power adapter.

Method 2. Charge the battery using a computer.







For more information about battery safety, see the Important Product

Learn more

For more information about Lenovo Mobile Phone functions, Regulatory Notices and other useful manuals, go to http://support.lenovo.com/.

Legal notices

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

First Edition (December 2013) © Copyright Lenovo 2013.

Reduce | Reuse | Recycle





HQ60110917000 Printed in China