lenovo

Lenovo S960 Quick Start Guide v1.1

Technical specifications



Model: Lenovo S960

Size and weight

Height: 144.3 mm Width: 72 mm Depth: 6.95 mm Weight: 121 g

CPU: MTK6589W Quad Core 1.5 GHz

Camera

Type: CMOS

Pixels: 13.0 MP (back) + 5.0 MP (front)

Power and battery

Battery: 2050 mAh (Built-in battery)

Display

Size: 5.0 inches (diagonal) Screen: Multi-touch display

Resolution: 1080P LCD type: IPS

Wireless communication

Bluetooth 4.0 WI AN WCDMA, GSM

First glance



- Receiver+ Speaker
 Pront camera
- 4 Volume down
- Earphone jack
- Micro USB
- 8 Back camera
- 3 Volume up
- 6 Microphone
- On/Off button

Installing the Micro SIM card


You need to insert the Micro SIM card provided by your carrier to use cellular services. Insert the Micro SIM card as shown.



- Step 1. Insert the SIM eject tool into the hole on the Micro SIM card tray.
- Step 2. Pull out the Micro SIM card tray and place the Micro SIM card in the tray.
- Step 3. Carefully replace the tray.
- Only Micro SIM card work with your phone.
 Do not insert or remove the Micro SIM card while your phone is turned on.
 Doing so may permanently damage your Micro SIM card or phone.

Charging the battery

Before using your phone, you might need to charge the battery. Charge the battery as shown.

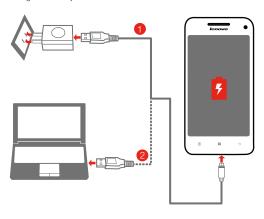

Method 1. Connect your phone to a power outlet using the included cable and USB power adapter.

Method 2. Charge the battery using a computer.







For more information about battery safety, see the Important Product Information Guide.

Learn More

For more information about Lenovo Mobile Phone functions, Regulatory Notices and other useful manuals, go to http://support.lenovo.com/.

Legal notices

Lenovo and the Lenovo logo are trademarks of Lenovo in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.

First Edition (April 2014)
© Copyright Lenovo 2014.

Reduce | Reuse | Recycle





5SC9A6MY7D Printed in China