### 1. Assembling Xiaomi's Fitness-Bracelet (Mi band)





take the basis of the bracelet and a strap



Mi band Pulse

Basis of the bracelet - strap

insert the bracelet basis into a strap



put a strap to your wrist

### 2. Installing Mi band App

Install Mi Health App or scan the QR-code and download the Mi Health App.





#### 3. Mi band connection




Turn the Mi band App on. Then your Xiaomi smartphone should detect the Fitness-Bracelet on base of the smartphone's registration number.

Indicators on the smartphone will turn white. Gently press them few times to finish the registration.

# 4. Mi band usage







more than 1/3 steps to a goal






After a successful synchronization the Mi band immediately starts to monitor the activity of your movements and the trace quality of your sleep, and heart rate. The quantity of included indicators shows the intensity of your movements. You can look at your bracelet and check the indicators at any time.

A goal is achieved

more than 2/3 steps to a goal

# 5. Charging a battery

3 red flashing lights indicate a battery is running low. Please, charge your device.

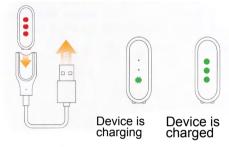

# 6. Main specifications

**Device name**: Mi Band (Lightsensitive) **Model**: XMSH02HM

Weight: 5.5g

**Temperature range**: -10C - 50C

Bracelet lenght: 225mm

Material of the fastener: aluminium alloy Requirements: Android 4.4 and newer.

Bluetooth 4.0

compatible with iOS,

iPhone4s/5/5s/5c/6/6s/6 Plus

Battery volume: 45mAh Battery type: Li-polymere Synchronize: Bluetooth 4.0 Water resistance level: IP67 Lenght: 157mm-205mm

Strap: poliurethane



## XIAOMI-MI.COM

# The presence of toxic and hazardous substances

| Title                        | Toxic and hazardous substances or elements |               |               |                              |                                     |  |
|------------------------------|--|---------------|---------------|------------------------------|-------------------------------------|--|
|                              | Pb<br>Plumbum                              | Hg<br>Mercury | Cd<br>Cadmium | Cr<br>Hexavalent<br>Chromium | PBBs<br>polybrominated<br>biphenyls | PBDEs<br>polybrominated<br>diphenyl ethers |
| Basics<br>of the<br>bracelet | x  | 0             | 0             | 0                            | 0                                   | o  |
| Battery                      | 0  | 0             | 0             | 0                            | 0                                   | 0  |
| Strap                        | 0  | 0             | 0             | 0                            | 0                                   | o  |
| Bracelet<br>fastener         | 0  | 0             | 0             | 0                            | 0                                   | 0  |
| USB<br>cable                 | x  | 0             | 0             | 0                            | 0                                   | 0  |

#### Warranty

The warranty service of Xiaomi Fitness-Bracelet "Mi band" is carried out in accordance with the law of «consumer rights» and the «Law on the quality of products.» The warranty service includes:

During the warranty period you have the right to repair, change or return the item. For repair, replacement or product return you must provide a receipt.

- 1. Within 7 days from the date of purchase, if the problem from the «List of faults» occurs, Xiaomi service center determines the cause of the problem. Then you choose between free product replacement, refund or repair.
- 2. Within 8-15 days from the date of purchase, if the problem from the «List of faults» occurs, Xiaomi service center determines the cause of the problem. Then you choose between free product replacement or repair.
- 3. Within 12 months from the date of purchase, if the problem from the «List of faults» occurs, Xiaomi service center determines the cause of the problem. Then you are provided with free repair.